


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.
THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

NEW CONSTRUCTION PLASTER FRAME INSTALLATION (NC) - REMOTE DRIVER (REM)

- A- ENGAGE (4) HANGER BARS IN HOUSING SLOTS AVAILABLE AND CONNECT THEM TOGETHER.
- B- FASTEN HANGER BARS TO CEILING BRACE WITH #8 SCREWS (**NOT INCLUDED**). HOUSING MUST BE FLUSH WITH CEILING BRACE AND INSURE SMALL FOLDED TAB IS PLACED UNDER CEILING BRACE.
- C- INSTALL DRYWALL AND MAKE THE CUT-OUT OPENING (**SEE DIMENSIONS BELOW**).

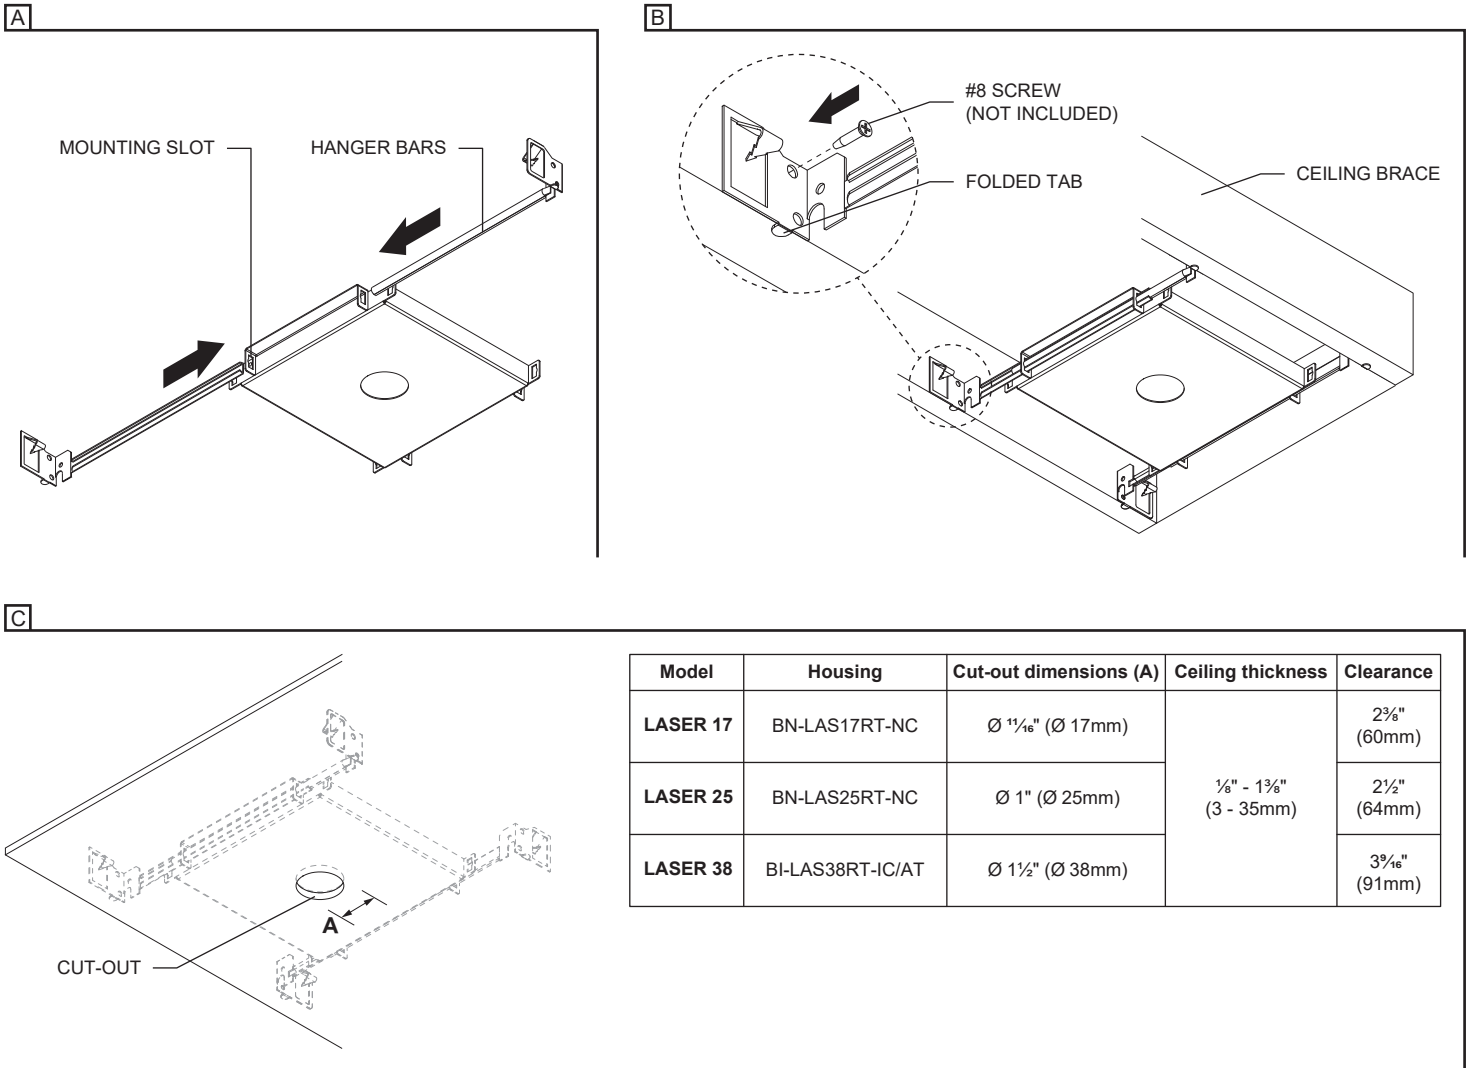

Model	Housing	Cut-out dimensions (A)	Ceiling thickness	Clearance
LASER 17	BN-LAS17RT-NC	Ø 1 1/16" (Ø 17mm)	1/8" - 1 3/8" (3 - 35mm)	2 3/8" (60mm)
LASER 25	BN-LAS25RT-NC	Ø 1" (Ø 25mm)		2 1/2" (64mm)
LASER 38	BI-LAS38RT-IC/AT	Ø 1 1/2" (Ø 38mm)		3 3/16" (91mm)